UNIT-IV

-: CONSTANT STRAIN TRIANGLE :-

* Constant Strain Triangle Problems of 2-Dimensional :-

We know that, for Two-dimensional problems, the displacements, traction components, and distributed body forces values are functions of (x, y).


The displacements vector 'u' is given by

$$u = [u, v]^T$$

and the stresses and strains

$$\sigma = [\sigma_x, \sigma_y, \tau_{xy}]^T$$

$$\epsilon = [\epsilon_x, \epsilon_y, \gamma_{xy}]^T$$

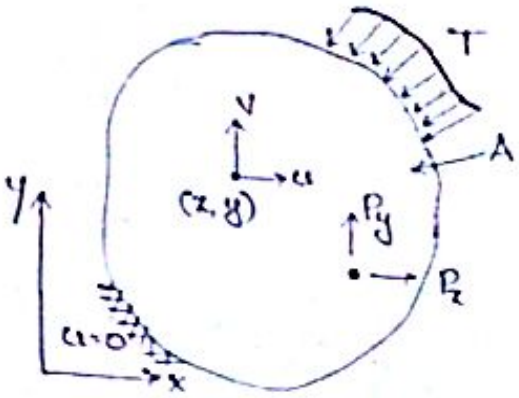

$f = [f_x, f_y]^T$, $T = [T_x, T_y]^T$ and $dv = t.dA$.

Where

f = Body force (Force/Unit volume)

T = Traction force (force/unit area)

The strain displacements relations are given by

$$\epsilon = \begin{Bmatrix} \epsilon_x \\ \epsilon_y \\ \gamma_{xy} \end{Bmatrix} = \begin{Bmatrix} \frac{\partial u}{\partial x} \\ \frac{\partial v}{\partial y} \\ \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \end{Bmatrix}$$

and $\sigma = D\epsilon$

Where the value of D is


For Plane stress, $D = \frac{E}{(1-\nu^2)} \begin{bmatrix} 1 & \nu & 0 \\ \nu & 1 & 0 \\ 0 & 0 & \frac{1-\nu}{2} \end{bmatrix}$

Plane strain, $D = \frac{E}{(1+\nu)(1-2\nu)} \begin{bmatrix} (1-\nu) & \nu & 0 \\ \nu & (1-\nu) & 0 \\ 0 & 0 & 0.5-\nu \end{bmatrix}$


Scanned by CamScanner

* Finite element Modeling:

The two-dimensional region is divided into straight-sided triangles. The points where the corners of the triangle meet are called Nodes, and each triangle formed by three Nodes and three sides is called as elements.

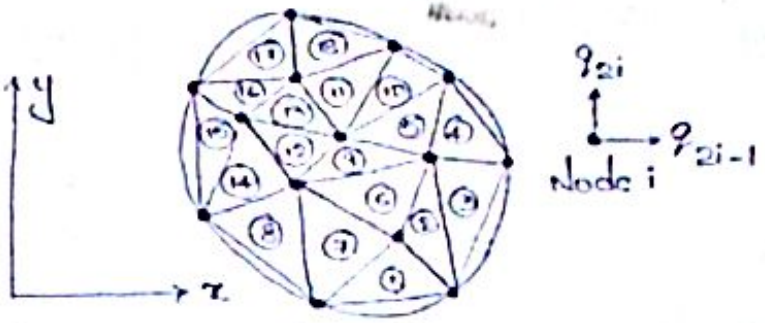

Consider a single element :-

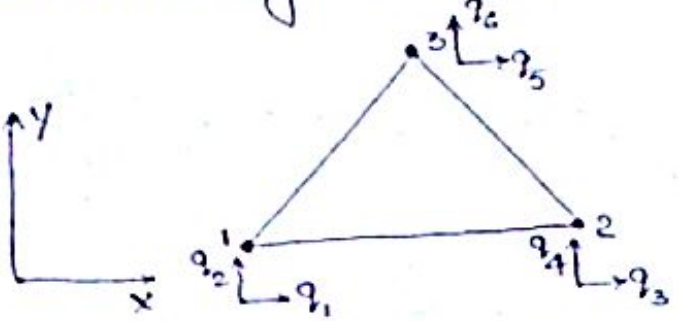

Here, q_1, q_3, q_5 are the displacements along X dirt.

q_2, q_4, q_6 are the displacements along Y dirt.

* Applications :-

To find the resultant displacements and stresses in case of plates under bi-axial loading and bending of plates. For example, the body of an automobile vehicle, ship, train and aircraft etc. can be analysed to find the location of the point in that body where the maximum stress and the maximum displacements occurs.


* CST and LST elements :

For the stress analysis of two dimensional objects such as plates and sheets, these objects are idealized into surface elements such as triangular, Rectangular and quadratic elements Among them, the triangular elements are considered as


Scanned by CamScanner

the simplest type of two dimensional elements. Depending upon the no. of nodes selected for the analysis, these triangular elements are specified as linear elements or non-linear elements.

For linear elements, only three corners nodes are considered for analysis as shown. On the other hand, for the non-linear elements, apart from the corner nodes, some inner nodes are also taken into account as shown.

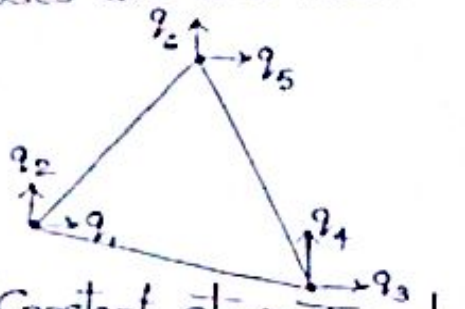

(a) Constant strain Triangle

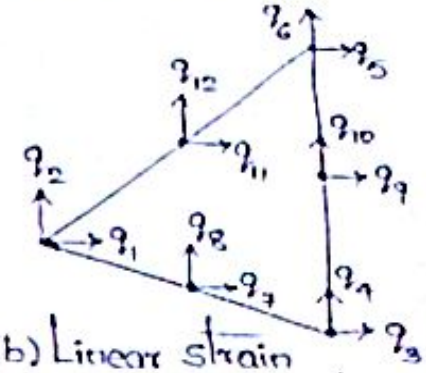


(b) Linear strain Triangle.

For linear Triangular elements, the displacements are assumed to vary linearly and hence the change of displacement per unit length is constant throughout the element and hence this type of element is called as 'Constant strain triangle' whereas in non-linear triangular element, the displacements vary non-linearly in such a way that the strain vary linearly and hence it is called 'Linear strain triangle' or 'Quadratic triangle'.

* Constant strain Triangle:

Let consider a CST element, as shown

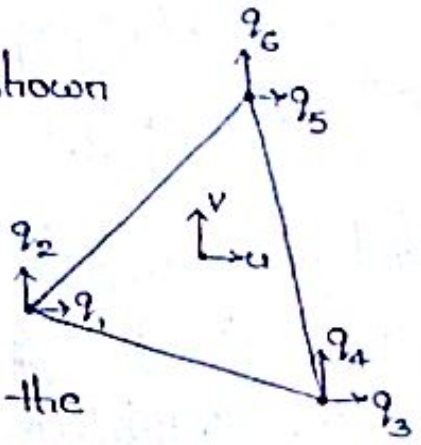

$$N_1 + N_2 + N_3 = 1$$

and let assume

$$N_1 = \xi \quad N_2 = \eta \quad \& \quad N_3 = 1 - \xi - \eta$$

The displacements are written using the shape functions

$$u = N_1 q_1 + N_2 q_3 + N_3 q_5$$

$$v = N_1 q_2 + N_2 q_4 + N_3 q_6$$

Scanned by CamScanner

Now

$$u = N_1 q_1 + N_2 q_3 + (1-\xi-\eta) q_5$$

$$= (q_1 - q_5)\xi + (q_3 - q_5)\eta + q_5$$

$$\therefore u = q_{15}\xi + q_{35}\eta + q_5 \longrightarrow (i)$$

& $$v = q_2 \xi + q_4 \eta + (1-\xi-\eta) q_6$$

$$= (q_2 - q_6)\xi + (q_4 - q_6)\eta + q_6$$

$$\therefore v = q_{26}\xi + q_{46}\eta + q_6 \longrightarrow (ii)$$

and we $u = Nq$

where $$N = \begin{bmatrix} N_1 & 0 & N_2 & 0 & N_3 & 0 \\ 0 & N_1 & 0 & N_2 & 0 & N_3 \end{bmatrix}$$

Similarly we can write

$$x = N_1 x_1 + N_2 x_2 + N_3 x_3$$

$$= \xi x_1 + \eta x_2 + (1-\xi-\eta) x_3$$

$$= (x_1 - x_3)\xi + (x_2 - x_3)\eta + x_3$$

$$\therefore x = x_{13}\xi + x_{23}\eta + x_3 \longrightarrow (iii)$$

& $$y = N_1 y_1 + N_2 y_2 + N_3 y_3$$

$$= \xi y_1 + \eta y_2 + (1-\xi-\eta) y_3$$

$$= (y_1 - y_3)\xi + (y_2 - y_3)\eta + y_3$$

$$\therefore y = y_{13}\xi + y_{23}\eta + y_3 \longrightarrow (iv)$$

We have seen from the above equations that (u, v) and (x, y) are the function ξ, η that is $u = u(x(\xi,\eta), y(\xi,\eta))$ a $v = v(x(\xi,\eta), y(\xi,\eta))$. By using the chain rule

$$\left.\begin{aligned} \frac{\partial u}{\partial \xi} &= \frac{\partial u}{\partial x}\cdot\frac{\partial x}{\partial \xi} + \frac{\partial u}{\partial y}\frac{\partial y}{\partial \xi} \\ \frac{\partial u}{\partial \eta} &= \frac{\partial u}{\partial x}\frac{\partial x}{\partial \eta} + \frac{\partial u}{\partial y}\cdot\frac{\partial y}{\partial \eta} \end{aligned}\right\} \longrightarrow (I)$$

Scanned by CamScanner

Similarly

$$\left.\begin{aligned}\frac{\partial v}{\partial \xi} &= \frac{\partial v}{\partial x}\frac{\partial x}{\partial \xi} + \frac{\partial v}{\partial y}\frac{\partial y}{\partial \xi}\\ \frac{\partial v}{\partial \eta} &= \frac{\partial v}{\partial x}\frac{\partial x}{\partial \eta} + \frac{\partial v}{\partial y}\frac{\partial y}{\partial \eta}\end{aligned}\right\} \text{—(II)}$$

Now considering the Eq.'s I, writting in the form of Matrix

$$\begin{bmatrix}\frac{\partial u}{\partial \xi}\\ \frac{\partial u}{\partial \eta}\end{bmatrix} = \begin{bmatrix}\frac{\partial x}{\partial \xi} & \frac{\partial y}{\partial \xi}\\ \frac{\partial x}{\partial \eta} & \frac{\partial y}{\partial \eta}\end{bmatrix}\begin{bmatrix}\frac{\partial u}{\partial x}\\ \frac{\partial u}{\partial y}\end{bmatrix}$$

$$\begin{bmatrix}\frac{\partial u}{\partial \xi}\\ \frac{\partial u}{\partial \eta}\end{bmatrix} = J\begin{bmatrix}\frac{\partial u}{\partial x}\\ \frac{\partial u}{\partial y}\end{bmatrix}$$

Where, J = Jacobian Matrix.

$$J = \begin{bmatrix}\frac{\partial x}{\partial \xi} & \frac{\partial y}{\partial \xi}\\ \frac{\partial x}{\partial \eta} & \frac{\partial y}{\partial \eta}\end{bmatrix} = \begin{bmatrix}x_{13} & y_{13}\\ x_{23} & y_{23}\end{bmatrix}$$

$\because \frac{\partial x}{\partial \xi} = \frac{\partial}{\partial \xi}(x_{13}\xi + x_{23}\eta + x_3) = x_{13}$

$\frac{\partial y}{\partial \xi} = \frac{\partial}{\partial \xi}(y_{13}\xi + y_{23}\eta + y_3) = y_{13}$

Similarly, $\frac{\partial x}{\partial \eta} = x_{23}$ & $\frac{\partial y}{\partial \eta} = y_{23}$

Now $\begin{bmatrix}\frac{\partial u}{\partial x}\\ \frac{\partial u}{\partial y}\end{bmatrix} = J^{-1}\begin{bmatrix}\frac{\partial u}{\partial \xi}\\ \frac{\partial u}{\partial \eta}\end{bmatrix}$

$\therefore J^{-1} = \frac{1}{\det J}\begin{bmatrix}y_{23} & -y_{13}\\ -x_{23} & x_{13}\end{bmatrix}$ and $\det J = x_{13}y_{23} - x_{23}y_{13}$.

$\because A = \begin{bmatrix}a & b\\ c & d\end{bmatrix}$ then $A^{-1} = \frac{1}{\det A}\begin{bmatrix}d & -b\\ -c & a\end{bmatrix}$ & $\det A = ad - bc$.

$$\begin{bmatrix}\frac{\partial u}{\partial x}\\ \frac{\partial u}{\partial y}\end{bmatrix} = \frac{1}{\det J}\begin{bmatrix}y_{23} & -y_{13}\\ -x_{23} & x_{13}\end{bmatrix}\begin{bmatrix}\frac{\partial u}{\partial \xi}\\ \frac{\partial u}{\partial \eta}\end{bmatrix}$$

$$\begin{bmatrix}\frac{\partial u}{\partial x}\\ \frac{\partial u}{\partial y}\end{bmatrix} = \frac{1}{\det J}\begin{bmatrix}y_{23} & -y_{13}\\ -x_{23} & x_{13}\end{bmatrix}\begin{bmatrix}q_{15}\\ q_{35}\end{bmatrix}$$

$\therefore \frac{\partial u}{\partial x} = \frac{1}{\det J}[y_{23}q_{15} - y_{13}q_{35}]$ & $\frac{\partial u}{\partial y} = \frac{1}{\det J}[-x_{23}q_{15} + x_{13}q_{35}]$

Scanned by CamScanner

Similarly, by considering the equations (1)

$$\begin{bmatrix} \frac{\partial v}{\partial \xi} \\ \frac{\partial v}{\partial \eta} \end{bmatrix} = \begin{bmatrix} \frac{\partial x}{\partial \xi} & \frac{\partial y}{\partial \xi} \\ \frac{\partial x}{\partial \eta} & \frac{\partial y}{\partial \eta} \end{bmatrix} \begin{bmatrix} \frac{\partial v}{\partial x} \\ \frac{\partial v}{\partial y} \end{bmatrix}$$

and we get

$$\begin{bmatrix} \frac{\partial v}{\partial x} \\ \frac{\partial v}{\partial y} \end{bmatrix} = \frac{1}{\det J} \begin{bmatrix} y_{23} & -y_{13} \\ -x_{23} & x_{13} \end{bmatrix} \begin{bmatrix} \frac{\partial v}{\partial \xi} \\ \frac{\partial v}{\partial \eta} \end{bmatrix}$$

$$\begin{bmatrix} \frac{\partial v}{\partial x} \\ \frac{\partial v}{\partial y} \end{bmatrix} = \frac{1}{\det J} \begin{bmatrix} y_{23} & -y_{13} \\ -x_{23} & x_{13} \end{bmatrix} \begin{bmatrix} q_{26} \\ q_{46} \end{bmatrix}$$

$$\therefore \frac{\partial v}{\partial x} = \frac{1}{\det J}\left[y_{23}q_{26} - y_{13}q_{46}\right] \quad \& \quad \frac{\partial v}{\partial y} = \frac{1}{\det J}\left[-x_{23}q_{26} + x_{13}q_{46}\right]$$

Using the strain-displacement relations

$$\epsilon = \begin{Bmatrix} \frac{\partial u}{\partial x} \\ \frac{\partial v}{\partial y} \\ \frac{\partial u}{\partial y} + \frac{\partial v}{\partial x} \end{Bmatrix} = \frac{1}{\det J} \begin{bmatrix} y_{23}q_{15} - y_{13}q_{35} \\ -x_{23}q_{26} + x_{13}q_{46} \\ -x_{23}q_{15} + x_{13}q_{35} + y_{23}q_{26} - y_{13}q_{46} \end{bmatrix}$$

Let $-y_{13} = y_{31}$ and $-x_{23} = x_{32}$.

$$\epsilon = \frac{1}{\det J} \begin{bmatrix} y_{23}(q_1 - q_5) + y_{31}(q_3 - q_5) \\ x_{32}(q_2 - q_6) + x_{13}(q_4 - q_6) \\ x_{32}(q_1 - q_5) + x_{13}(q_3 - q_5) + y_{23}(q_2 - q_6) + y_{31}(q_4 - q_6) \end{bmatrix}$$

$$= \frac{1}{\det J} \begin{bmatrix} y_{23}q_1 + y_{31}q_3 + q_5(-y_{23} - y_{31}) \\ x_{32}q_2 + x_{13}q_4 + q_6(-x_{32} - x_{13}) \\ x_{32}q_1 + y_{23}q_2 + x_{13}q_3 + y_{31}q_4 + q_5(-x_{13} - x_{32}) + q_6(-y_{23} - y_{31}) \end{bmatrix}$$

Now $-y_{23} - y_{31} = y_{32} + y_{13} = y_3 - y_2 + y_1 - y_3$

$= y_{12}$

and $-x_{32} - x_{13} = x_{23} + x_{31} = x_2 - x_3 + x_3 - x_1 = x_{21}$

Scanned by CamScanner

$$\epsilon = \frac{1}{\det J}\begin{bmatrix} y_{23}q_1 + y_{31}q_3 + y_{12}q_5 \\ x_{32}q_2 + x_{13}q_4 + x_{21}q_6 \\ x_{32}q_1 + y_{23}q_2 + x_{13}q_3 + y_{31}q_4 + x_{21}q_5 + y_{12}q_6 \end{bmatrix}$$

$$\epsilon = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}\begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \end{bmatrix}$$

$$\epsilon = Bq$$

$$\therefore B = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{21} \end{bmatrix}$$

where B = Strain - displacement matrix

Now consider the Potential Energy Approach.

$$\pi = \frac{1}{2}\int_A \epsilon^T D\epsilon\, t\, dA - \int_A u^T P t\, dA - \int_L u^T T\, dl - \sum_i u_i^T P_i$$

$$\left[\because T = D\epsilon,\ dv = t.dA\right]$$

Consider the strain energy term

$$U_e = \frac{1}{2}\int_A \epsilon^T D\epsilon\, t.dA$$

$$= \frac{1}{2}\int_A B^T q^T D B q\, t.dA$$

$$= \frac{1}{2}.q^T.B^T D.Bq.t.\oint_A dA$$

$$= \frac{1}{2}q^T t.A.B^T DBq$$


$$U_e = \frac{1}{2}q^T k_e q$$

$\therefore$ Element stiffness Matrix, $k_e = q^T.t_e A_e B^T DB.$

Scanned by CamScanner

Problems:

1. For the point 'p' located inside the triangular element as shown if the shape functions N_1 and N_2 are 0.3 and 0.5 resp, find its x and y coordinates and the left out shape functions.

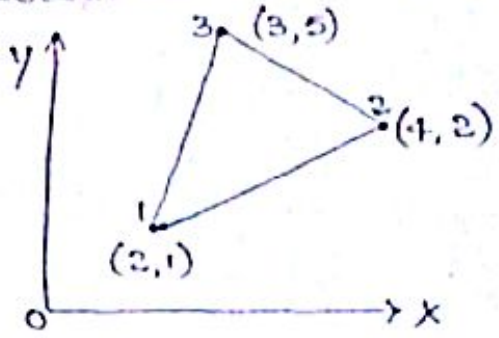

Sol:- Given

$(x_1, y_1) = (2,1)$, $(x_2, y_2) = (4,2)$, $(x_3, y_3) = (3,5)$

and $N_1 = 0.3$ and $N_2 = 0.5$

We know that

$N_1 = \xi = 0.3$ & $N_2 = \eta = 0.5$

$x = x_{13}\xi + x_{23}\eta + x_3$

$= (2-3)\xi + (4-3)\eta + x_3$

$= (-1)\xi + \eta + 3.$

$x = -0.3 + 0.5 + 3 = 3.2$

& $y = y_{13}\xi + y_{23}\eta + y_3$


$= (1-5)0.3 + (2-5)0.5 + 5.$

$= 2.3$

we know that, $N_1 + N_2 + N_3 = 1$

$N_3 = 1 - 0.3 - 0.5 = 0.2.$

2. Determine the element stiffness Matrix for the fig shown below. Assume $E = 200\,GPa$ and $\mu = 0.3 = \nu$, and thickness = 10mm. Consider plane stress.

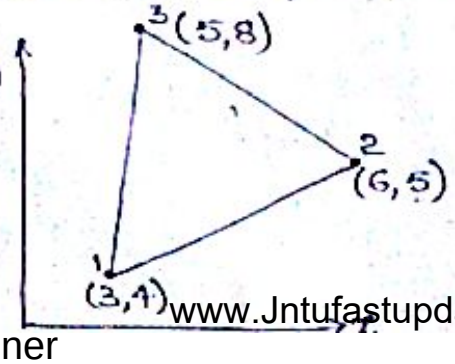


All dimensions are in Millimeters.

Scanned by CamScanner

Sol:- Given

$(x_1, y_1) = (3,4)$; $(x_2, y_2) = (6,5)$; $(x_3, y_3) = (5,2)$

and Gpa E = 200 GPas and $\nu = 0.3$, $t = 10mm$.

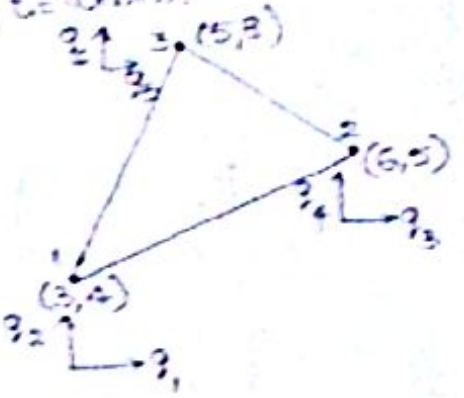

Area of element, $A = \frac{1}{2}\begin{vmatrix} 1 & x_1 & y_1 \\ 1 & x_2 & y_2 \\ 1 & x_3 & y_3 \end{vmatrix}$

$= \frac{1}{2}\begin{vmatrix} 1 & 3 & 4 \\ 1 & 6 & 5 \\ 1 & 5 & 2 \end{vmatrix}$

$\therefore A = \frac{1}{2}\left[(12-25) - 3(2-5) + 4(5-6)\right]$

$= \frac{1}{2}\left[23 - 9 - 4\right]$

$A = 5 mm^2$

Since, we need to solve the problem using plane stress condition, we have

$$D = \frac{E}{(1-\nu^2)}\begin{bmatrix} 1 & \nu & 0 \\ \nu & 1 & 0 \\ 0 & 0 & \frac{1-\nu}{2} \end{bmatrix}$$

$$= \frac{200\times10^3}{(1-0.3^2)}\begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & \frac{1-0.3}{2} \end{bmatrix}$$

$\because E = 200 GPas$
$= 200\times10^9 N/m^2$
$= 200\times10^9\times10^{-6} N/mm^2$
$= 200\times10^3 N/mm^2$

$$\therefore D = 2.197\times10^5\begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & 0.35 \end{bmatrix}$$

Now, we know, the strain-displacement matrix.

$$B = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}$$

Here $J = \begin{bmatrix} x_{13} & y_{13} \\ x_{23} & y_{23} \end{bmatrix}$

$\det J = x_{13}y_{23} - x_{23}y_{13} = (-2)(-3) - (1)(-4)$

$= 6 + 4$

$\det J = 10$

Scanned by CamScanner

$$B = \frac{1}{10}\begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 3 & -1 \end{bmatrix}$$

Now

$$B^T D = \frac{1}{10}\begin{bmatrix} -3 & 0 & -1 \\ 0 & -1 & -3 \\ 4 & 0 & -2 \\ 0 & -2 & 4 \\ -1 & 0 & 3 \\ 0 & 3 & -1 \end{bmatrix} 2.197\times10^5 \begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & 0.35 \end{bmatrix}$$

$$B^T D = 2.197\times10^4 \begin{bmatrix} -3 & -0.9 & -0.35 \\ -0.3 & -1 & -1.05 \\ 4 & 1.2 & -0.7 \\ 0.6 & -2 & +1.4 \\ -1 & -0.3 & 1.05 \\ 0.9 & 3 & -0.35 \end{bmatrix}$$

∴ We know,


The element stiffness matrix $K_e = t_e A_e B^T D B$.

$$K_e = 10\times5\times2.197\times10^3 \begin{bmatrix} -3 & -0.9 & -0.35 \\ -0.3 & -1 & -1.05 \\ 4 & 1.2 & -0.7 \\ -0.6 & -2 & 1.4 \\ -1 & -0.3 & 1.05 \\ 0.9 & 3 & -0.35 \end{bmatrix} \begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 3 & -1 \end{bmatrix}$$

$$\therefore K_e = 10.985\times10^4 \begin{array}{c} \begin{matrix} 1 & 2 & 3 & 4 & 5 & 6 \end{matrix} \\ \begin{bmatrix} 9.35 & 1.95 & -11.3 & -3.2 & 1.95 & 3.05 \\ 1.95 & 4.15 & 0.9 & -2.2 & -2.85 & -1.95 \\ -11.3 & 0.9 & 17.4 & -5.2 & -6.1 & 4.3 \\ -3.2 & -2.2 & -5.2 & 9.6 & 4.8 & -7.4 \\ 1.95 & -2.85 & -6.1 & 4.8 & 4.15 & -1.95 \\ 3.05 & -1.95 & 4.3 & -7.4 & -1.95 & 9.35 \end{bmatrix} \begin{matrix} 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \end{matrix} \end{array}$$

Scanned by CamScanner

3. Determine the Nodal displacements and the element stresses for the two dimensional loaded plate as shown in fig. Assume plane stress condition. Take E = 210 GPa, ν = 0.25, t = 10mm

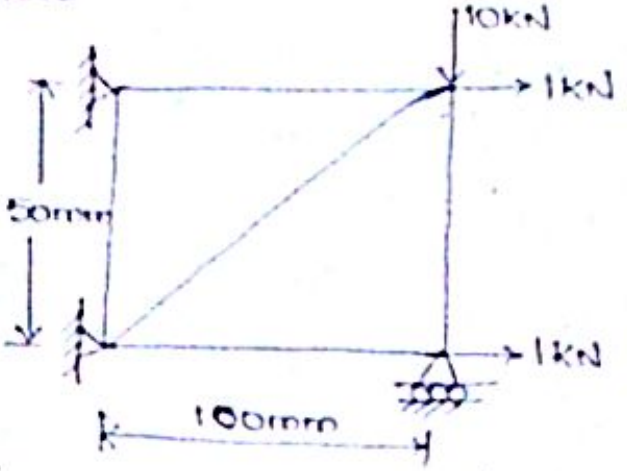


Sol:- Given

$E = 210\ GPa = 210 \times 10^3\ N/mm^2$

$\nu = 0.25$

$t = 10mm$

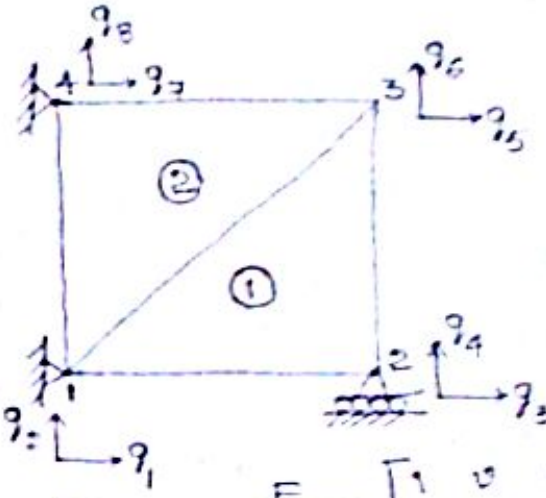

Elements	Nodes		
①	1	2	3
②	1	4	3

Nodes	Co-ordinates x	y
1	0	0
2	100	0
3	100	50
4	0	50

Plane stress $D = \frac{E}{(1-\nu^2)} \begin{bmatrix} 1 & \nu & 0 \\ \nu & 1 & 0 \\ 0 & 0 & \frac{1-\nu}{2} \end{bmatrix}$

$D = \frac{210 \times 10^3}{(1-0.25^2)} \begin{bmatrix} 1 & 0.25 & 0 \\ 0.25 & 01 & 0 \\ 0 & 0 & \frac{1-0.25}{2} \end{bmatrix}$

$D = 56 \times 10^3 \begin{bmatrix} 4 & 1 & 0 \\ 1 & 4 & 0 \\ 0 & 0 & 1.5 \end{bmatrix}$

Consider element ① :

$B' = \frac{1}{\det J} \begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}$

$(x_1, y_1) = (0,0)$

$(x_2, y_2) = (100,0)$

$(x_3, y_3) = (100,50)$

$\det J = \left| \begin{bmatrix} x_{13} & y_{13} \\ x_{23} & y_{23} \end{bmatrix} \right| = \left| \begin{bmatrix} -100 & -50 \\ 0 & -50 \end{bmatrix} \right| = 5000.$

$\det J = 5000.$

Scanned by CamScanner

$$B = \frac{1}{5000}\begin{bmatrix} 50 & 0 & 50 & 0 & 0 & 0 \\ 0 & 0 & 0 & -100 & 0 & 100 \\ 0 & -50 & -100 & 50 & 100 & 0 \end{bmatrix}$$

$$= \frac{1}{100}\begin{bmatrix} -1 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & -2 & 0 & 2 \\ 0 & -1 & -2 & 1 & 2 & 0 \end{bmatrix}$$

Let

$$B^T D = \frac{1}{100}\begin{bmatrix} -1 & 0 & 0 \\ 0 & 0 & -1 \\ 1 & 0 & -2 \\ 0 & -2 & 1 \\ 0 & 0 & 2 \\ 0 & 2 & 0 \end{bmatrix} \times 56\times10^3 \begin{bmatrix} 4 & 1 & 0 \\ 1 & 4 & 0 \\ 0 & 0 & 1.5 \end{bmatrix}$$

$$= 560\begin{bmatrix} -4 & -1 & 0 \\ 0 & 0 & -1.5 \\ 4 & 1 & -3 \\ -2 & -8 & 1.5 \\ 0 & 0 & 3 \\ 2 & 8 & 0 \end{bmatrix}$$

Element stiffness matrix

$$K_e = t_e A_e B^T D B$$

$$K_1 = \frac{10^5 \times \frac{1}{2} \times 100 \times 50 \times 560}{100} \begin{bmatrix} -4 & -1 & 0 \\ 0 & 0 & -1.5 \\ 4 & 1 & -3 \\ -2 & -8 & 1.5 \\ 0 & 0 & 3 \\ 2 & 8 & 0 \end{bmatrix} \begin{bmatrix} 1 & 2 & 3 & 4 & 5 & 6 \\ -1 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & -2 & 0 & 2 \\ 0 & -1 & -2 & 1 & 2 & 0 \end{bmatrix}$$

$$K_1 = 250\times560 \begin{array}{c} \\ 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \end{array} \begin{array}{c} \begin{array}{cccccc} 1 & 2 & 3 & 4 & 5 & 6 \end{array} \\ \begin{bmatrix} 4 & 0 & -4 & 2 & 0 & -2 \\ 0 & 1.5 & 3 & -1.5 & -3 & 0 \\ -4 & 3 & 10 & -5 & -6 & 2 \\ 2 & -1.5 & -5 & 17.5 & 3 & -16 \\ 0 & -3 & -6 & 3 & 6 & 0 \\ -2 & 0 & 2 & -16 & 0 & 16 \end{bmatrix} \end{array}$$

Scanned by CamScanner

Consider element ② :-

$(x_1, y_1) = (0,0)$: $(x_2, y_2) = (0,50)$: $(x_3, y_3) = (100,50)$

$$B^2 = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}$$

$$\det J = |x_{13}y_{23} - x_{23}y_{13}| = (-100)(0) - (-100)(-50)$$

$$= 5000$$

$$B^2 = \frac{1}{5000}\begin{bmatrix} 0 & 0 & 50 & 0 & -50 & 0 \\ 0 & 100 & 0 & -100 & 0 & 0 \\ 100 & 0 & -100 & 50 & 0 & -50 \end{bmatrix}$$

$$= \frac{1}{100}\begin{bmatrix} 0 & 0 & 1 & 0 & -1 & 0 \\ 0 & 2 & 0 & -2 & 0 & 0 \\ 2 & 0 & -2 & 1 & 0 & -1 \end{bmatrix}$$

$$B^{2T} D = 560 \begin{bmatrix} 0 & 0 & 2 \\ 0 & 2 & 0 \\ 1 & 0 & -2 \\ 0 & -2 & 1 \\ -1 & 0 & 0 \\ 0 & 0 & -1 \end{bmatrix} \begin{bmatrix} 1 & 1 & 0 \\ 1 & 4 & 0 \\ 0 & 0 & 1.5 \end{bmatrix}$$

$$= 560 \begin{bmatrix} 0 & 0 & 3 \\ 2 & 8 & 0 \\ 4 & 1 & -3 \\ -2 & -8 & 1.5 \\ -4 & -1 & 0 \\ 0 & 0 & -1.5 \end{bmatrix}$$

Elements Stiffness Matrix.

$$K_2 = \frac{5 \times 1/2 \times 50 \times 100 \times 560}{100} \begin{bmatrix} 0 & 0 & 3 \\ 2 & 8 & 0 \\ 4 & 1 & -3 \\ -2 & -8 & 1.5 \\ -4 & -1 & 0 \\ 0 & 0 & -1.5 \end{bmatrix} \begin{bmatrix} 0 & 0 & 1 & 0 & -1 & 0 \\ 0 & 2 & 0 & -2 & 0 & 0 \\ 2 & 0 & -2 & 1 & 0 & -1 \end{bmatrix}$$

$$= 250 \times 560 \begin{bmatrix} 6 & 0 & -6 & 3 & 0 & -3 \\ 0 & 16 & 2 & -16 & -2 & 0 \\ -6 & 2 & 10 & -5 & -4 & 3 \\ 3 & -16 & -5 & 17.5 & 2 & -1.5 \\ 0 & -2 & -4 & 2 & 4 & 0 \\ -3 & 0 & 3 & -1.5 & 0 & 1.5 \end{bmatrix}$$

Scanned by CamScanner

$$K_2 = 250 \times 560 \times \begin{bmatrix} 6 & 0 & -6 & 3 & 0 & -3 \\ 0 & 16 & 2 & -16 & -2 & 0 \\ -6 & 2 & 10 & -5 & -4 & 3 \\ 3 & -16 & -5 & 17.5 & 2 & -1.5 \\ 0 & -2 & -4 & 2 & 4 & 0 \\ -3 & 0 & 3 & -1.5 & 0 & 1.5 \end{bmatrix} \begin{matrix} 1 \\ 2 \\ 7 \\ 8 \\ 5 \\ 6 \end{matrix}$$

Global stiffness Matrix

$$K = 250 \times 560 \times \begin{bmatrix} 10 & 0 & -4 & 2 & 0 & -5 & -6 & 3 \\ 0 & 17.5 & 3 & -1.5 & -5 & 0 & 2 & -16 \\ -4 & 3 & 10 & -5 & -6 & 2 & 0 & 0 \\ 2 & -1.5 & -5 & 17.5 & 3 & -16 & 0 & 0 \\ 0 & -5 & -6 & 3 & 10 & 0 & -4 & 2 \\ -5 & 0 & 2 & -16 & 0 & 17.5 & 3 & -1.5 \\ -6 & 2 & 0 & 0 & -4 & 3 & 10 & -5 \\ 3 & -16 & 0 & 0 & 2 & -1.5 & -5 & 17.5 \end{bmatrix} \begin{matrix} 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ 7 \\ 8 \end{matrix}$$

and load vector.

$$F = \begin{bmatrix} F_{1x} \\ F_{1y} \\ F_{2x} \\ F_{2y} \\ F_{3x} \\ F_{3y} \\ F_{4x} \\ F_{4y} \end{bmatrix} = \begin{bmatrix} R_{1x} \\ R_{1y} \\ 1000 \\ R_{2y} \\ 1000 \\ -10000 \\ R_{4x} \\ R_{4y} \end{bmatrix}$$

Consider the finite element eq. $KQ = F$

$$14 \times 10^4 \begin{bmatrix} 10 & 0 & -4 & 2 & 0 & -5 & -6 & 3 \\ 0 & 17.5 & 3 & -1.5 & -5 & 0 & 2 & -16 \\ -4 & 3 & 10 & -5 & -6 & 2 & 0 & 0 \\ 2 & -1.5 & -5 & 17.5 & 3 & -16 & 0 & 0 \\ 0 & -5 & -6 & 3 & 10 & 0 & -4 & 2 \\ -5 & 0 & 2 & -16 & 0 & 17.5 & 3 & -1.5 \\ -6 & 2 & 0 & 0 & -4 & 3 & 10 & -5 \\ 3 & -16 & 0 & 0 & 2 & -1.5 & -5 & 17.5 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \\ q_7 \\ q_8 \end{bmatrix} = \begin{bmatrix} R_{1x} \\ R_{1y} \\ 1000 \\ R_{2y} \\ 1000 \\ -10000 \\ R_{4x} \\ R_{4y} \end{bmatrix}$$

Scanned by CamScanner

By using elimination Approach, since $q_1 = q_2 = q_4 = q_7 = q_8 = 0$, So eliminate 1,2,4,7,8 rows and columns, then we get

$$14\times10^4 \begin{bmatrix} 10 & -6 & 2 \\ -6 & 10 & 0 \\ 2 & 0 & 17.5 \end{bmatrix} \begin{bmatrix} q_3 \\ q_5 \\ q_6 \end{bmatrix} = \begin{bmatrix} 1000 \\ 1000 \\ -10.000 \end{bmatrix}$$

$$140\left[10q_3 - 6q_5 + 2q_6\right] = 1$$

$$140\left[-6q_3 + 10q_5\right] = 1$$

$$14\left[2q_3 + 17.5q_6\right] = -1$$

By solving, we get

$q_3 = 0.0032$, $q_5 = 0.0026$, $q_6 = -0.0044$ mm.

To find element stresses:

Element ①

$$\sigma_1 = DBq$$

$$= \frac{56\times10^3}{100} \begin{bmatrix} 4 & 1 & 0 \\ 1 & 4 & 0 \\ 0 & 0 & 1.5 \end{bmatrix} \begin{bmatrix} -1 & 0 & 1 & 0 & 0 & 0 \\ 0 & 0 & 0 & -2 & 0 & 2 \\ 0 & -1 & -2 & 1 & 2 & 0 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \end{bmatrix}$$

$$= 560 \begin{bmatrix} -4 & 0 & 4 & -2 & 0 & 2 \\ -1 & 0 & 1 & -8 & 0 & 8 \\ 0 & -1.5 & -3 & 1.5 & 3 & 0 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ 0.0032 \\ 0 \\ 0.0026 \\ -0.0044 \end{bmatrix}$$

$$= 560 \begin{bmatrix} (4\times0.0032) + 2(-0.0044) \\ (1\times0.0032) + 8(-0.0044) \\ (-3\times0.0032) + 3(0.0026) \end{bmatrix}$$

$$\begin{Bmatrix} \sigma_x \\ \sigma_y \\ \tau_{xy} \end{Bmatrix}_1 = \begin{Bmatrix} 0.24 \\ -17.92 \\ -1.008 \end{Bmatrix} N/mm^2 = \sigma_1$$

Scanned by CamScanner

Element ②

$$\sigma_2 = DBq^2$$

$$= 560 \begin{bmatrix} 4 & 1 & 0 \\ 1 & 4 & 0 \\ 0 & 0 & 1.5 \end{bmatrix} \begin{bmatrix} 0 & 0 & 1 & 0 & -1 & 0 \\ 0 & 2 & 0 & -2 & 0 & 0 \\ 2 & 0 & -2 & 1 & 0 & -1 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ q_7 \\ q_8 \\ q_5 \\ q_6 \end{bmatrix}$$

$$= 560 \times \begin{bmatrix} 0 & +2 & 4 & -2 & -4 & 0 \\ 0 & 8 & 1 & -8 & -1 & 0 \\ 3 & 0 & -3 & 1.5 & 0 & -1.5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \\ 0 \\ 0 \\ 0.0026 \\ -0.0044 \end{bmatrix}$$

$$\begin{Bmatrix} \sigma_x \\ \sigma_y \\ \tau_{xy} \end{Bmatrix}_2 = \begin{Bmatrix} 5.824 \\ 1.456 \\ -3.696 \end{Bmatrix} N/mm^2$$

Scanned by CamScanner

Note:-

When any machine components or structure is subjected to two different stresses like normal stresses and shear stress, then at some specific planes inside the element, there may be maximum normal stresses, a minimum normal stress and a Maximum shear stress. The values are.

1. Maximum Normal stress

$$\sigma_1 = \frac{1}{2}\left[(\sigma_x+\sigma_y)+\sqrt{(\sigma_x-\sigma_y)^2+4\tau_{xy}^2}\right]$$

2. Minimum Normal stress

$$\sigma_2 = \frac{1}{2}\left[(\sigma_x+\sigma_y)-\sqrt{(\sigma_x-\sigma_y)^2+4\tau_{xy}^2}\right]$$

3. Maximum shear stress.

$$\tau_m = \frac{1}{2}(\sigma_1-\sigma_2) = \frac{1}{2}\sqrt{(\sigma_x-\sigma_y)^2+4\tau_{xy}^2}$$

4. Principal angle θ_p

$$\tan 2\theta_p = \frac{2\tau_{xy}}{(\sigma_x-\sigma_y)} \text{ or}$$

$$\theta_p = \frac{1}{2}\tan^{-1}\left(\frac{2\tau_{xy}}{(\sigma_x-\sigma_y)}\right)$$

1. Calculate the element stresses σ_x, σ_y, τ_{xy}, and Principle stress σ_1 & σ_2 and the principle angle θ_p for the CST element shown in fig.

The Nodal displacements are

$u_1 = 2.0\mu m$ | ∵ 1 Micrometer = 0.001mm or 10^{-6}m
1 Metre = 1000mm.

$V_1 = 1.0\mu m$

$u_2 = 0.5\mu m$ $V_2 = 1.5\mu m$

$u_3 = 1.2\mu m$ $V_3 = 2.8\mu m$


Take E = 210GPa and $\vartheta = 0.25$. Assume plane strain condition.

Scanned by CamScanner

$(x_1, y_1) = (10, 8)$

$(x_2, y_2) = (15, 2)$

$(x_3, y_3) = (18, 12)$

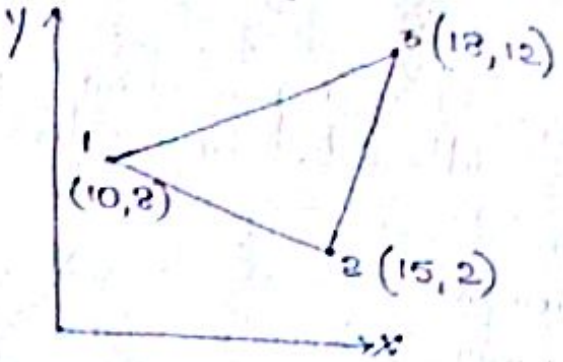

Sol:- Given

$u_1 = 2\mu m = 2 \times 10^{-3} mm = 0.002$

$V_1 = 1.0\mu m = 0.001 mm$

$u_2 = 0.5\mu m = 0.0005 mm$

$V_2 = 1.5\mu m = 0.0015 mm$

$u_3 = 1.2\mu m = 0.0012 mm$

$V_3 = 2.2\mu m = 0.0022 mm$

and $E = 210 GPa = 210 \times 10^9 \times 10^{-6} N/mm^2 = 210 \times 10^3 N/mm^2$

$\nu = 0.25$

and from diagram,

$(x_1, y_1) = (10, 8) \quad (x_2, y_2) = (15, 2) \quad (x_3, y_3) = (18, 12)$

$$\text{Area} = \frac{1}{2}\begin{vmatrix} 1 & x_1 & y_1 \\ 1 & x_2 & y_2 \\ 1 & x_3 & y_3 \end{vmatrix} = \frac{1}{2}\begin{vmatrix} 1 & 10 & 8 \\ 1 & 15 & 2 \\ 1 & 18 & 12 \end{vmatrix}$$

$$= \frac{1}{2}\left[(180-36) - 10(12-2) + 8(18-15)\right]$$

$$= \frac{1}{2}\left[144 - 100 + 24\right]$$

$$= 34$$

Now for plane strain condition :

$$D = \frac{E}{(1+\nu)(1-2\nu)}\begin{bmatrix} (1-\nu) & \nu & 0 \\ \nu & (1-\nu) & 0 \\ 0 & 0 & 0.5-\nu \end{bmatrix}$$

$$= \frac{210 \times 10^3}{(1+0.25)(1-2(0.25))}\begin{bmatrix} 1-0.25 & 0.25 & 0 \\ 0.25 & 1-0.25 & 0 \\ 0 & 0 & 0.5-0.25 \end{bmatrix}$$

$$= 0.625 \times 10^3 \begin{bmatrix} 0.75 & 0.25 & 0 \\ 0.25 & 0.75 & 0 \\ 0 & 0 & 0.25 \end{bmatrix}$$

Scanned by CamScanner

$$B = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}$$

$$J = \begin{bmatrix} x_{13} & y_{13} \\ x_{23} & y_{23} \end{bmatrix} = \begin{bmatrix} -2 & -4 \\ -3 & -10 \end{bmatrix}$$

$$\det J = 20 - 12 = 68$$

$$B = \frac{1}{68}\begin{bmatrix} -10 & 0 & 4 & 0 & 6 & 0 \\ 0 & 3 & 0 & -2 & 0 & 5 \\ 3 & -10 & -2 & 4 & 5 & 6 \end{bmatrix}$$

For given CST element, the element stresses is given by

$$\sigma = [D][B] = DBq$$

$$\sigma = \{\sigma_x, \sigma_y, \tau_{xy}\}^T$$

$$\sigma = 0.625\times10^3 \begin{bmatrix} 0.75 & 0.25 & 0 \\ 0.25 & 0.75 & 0 \\ 0 & 0 & 0.25 \end{bmatrix} \times \frac{1}{68}\begin{bmatrix} -10 & 0 & 4 & 0 & 6 & 0 \\ 0 & 3 & 0 & -2 & 0 & 5 \\ 3 & -10 & -2 & 4 & 5 & 6 \end{bmatrix} \begin{bmatrix} u_1 \\ v_1 \\ u_2 \\ v_2 \\ u_3 \\ v_3 \end{bmatrix}$$

$$= 9.191 \begin{bmatrix} -7.5 & 0.75 & 3 & -2 & 4.5 & 1.25 \\ 2.5 & 2.25 & 1 & -6 & 1.5 & 3.75 \\ 0.75 & -2.5 & -2 & 1 & 1.25 & 1.5 \end{bmatrix} \begin{bmatrix} 0.002 \\ 0.001 \\ 0.0005 \\ 0.0015 \\ 0.0012 \\ 0.0028 \end{bmatrix}$$

$$= 9.191 \begin{bmatrix} -0.00685 \\ 0.01105 \\ 0.0052 \end{bmatrix}$$

$$\begin{Bmatrix} \sigma_x \\ \sigma_y \\ \tau_{xy} \end{Bmatrix} = \begin{bmatrix} -0.0629 \\ 0.1015 \\ 0.0477 \end{bmatrix} N/mm^2.$$

Scanned by CamScanner

Maximum Normal stress (or Max. principal stress)

$$\sigma_1 = \frac{1}{2}\left[(\sigma_x + \sigma_y) + \sqrt{(\sigma_x - \sigma_y)^2 + 4\tau_{xy}^2}\right]$$

$$= \frac{1}{2}\left[(-0.0629 + 0.1015) + \sqrt{(-0.0629 - 0.1015)^2 + 4(0.0477)^2}\right]$$

$$= \frac{1}{2}\left[0.228\right]$$

$$\sigma_1 = 0.1143 \text{ N/mm}^2$$

* Minimum Normal stress (or Min. Principal stress)

$$\sigma_2 = \frac{1}{2}\left[(\sigma_x + \sigma_y) - \sqrt{(\sigma_x - \sigma_y)^2 + 4\tau_{xy}^2}\right]$$

$$= \frac{1}{2}\left[(-0.0629 + 0.1015) - \sqrt{(-0.0629 - 0.1015)^2 + 4(0.0477)^2}\right]$$

$$= -0.0757 \text{ N/mm}^2$$

Principal angle $\theta_p = 1/2 \tan^{-1}\left[\frac{2\tau_{xy}}{(\sigma_x - \sigma_y)}\right]$

$$= \frac{1}{2}\tan^{-1}\left[\frac{2(0.0477)}{(-0.0629 - 0.1015)}\right]$$

$$\theta_p = \frac{1}{2}\tan^{-1}(-0.5802)$$

* Temperature Effects :-

At the time of fundion, if the CST element is at a higher temperature or lower temperature than room temperature, the change in temperature ΔT produces some amount of deformation and the corresponding strain is known as thermal strain, which is considered as initial strain

for plane stress $\{\epsilon_0\} = \begin{Bmatrix} \epsilon_{x0} \\ \epsilon_{y0} \\ \gamma_{xy0} \end{Bmatrix} = \begin{Bmatrix} \alpha\Delta T \\ \alpha\Delta T \\ 0 \end{Bmatrix}$

Scanned by CamScanner

For plane strain $\{\epsilon_0\} = (1+\nu)\begin{bmatrix}\alpha\Delta T\\ \alpha\Delta T\\ 0\end{bmatrix}$

α : Coefficient of thermal expansion.

ΔT : Change in temperature.

ν = Poisson's ratio.

Element thermal load (i.e, thermal force)

$$\{F_0\} = \{\theta_0\} = [B^T] D\epsilon_0 \times A t.$$


$$= t.A\, B^T D\epsilon_0$$

Element ~~thermal~~ stress (i.e, due to Mechanical loading & temp)

$$\{\sigma_1\} = D[\epsilon - \epsilon_0] = D[B q - \epsilon_0]$$

$$= DBq - D\epsilon_0.$$

1. The element shown in the figure is subjected to temperature change of 10c. Find the K and F due to temp. change. Take E = 70GPas, t = 10mm, ν = 0.3 and $\alpha = 7\times10^{-6}/^{\circ}c$. and also determine the deflection at the point of load application & also the element stresses.

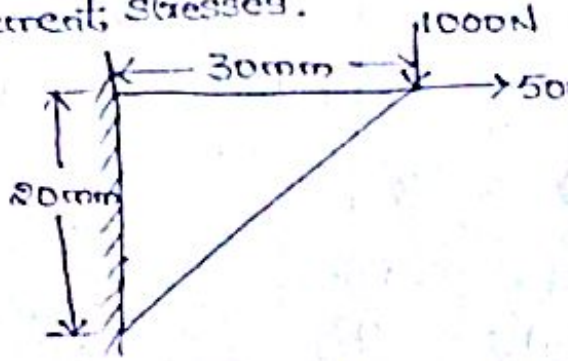

Assume plane stress.

Sol:- Given


$E = 70\times10^3 N/mm^2$ $t = 10mm$, & $\nu = 0.3$ $\alpha = 7\times10^{-6}/^{\circ}c$

$\Delta T = 10^{\circ}c$.

$(x_1, y_1) = (0,0)$

$(x_2, y_2) = (30,20)$

$(x_3, y_3) = (0,20)$

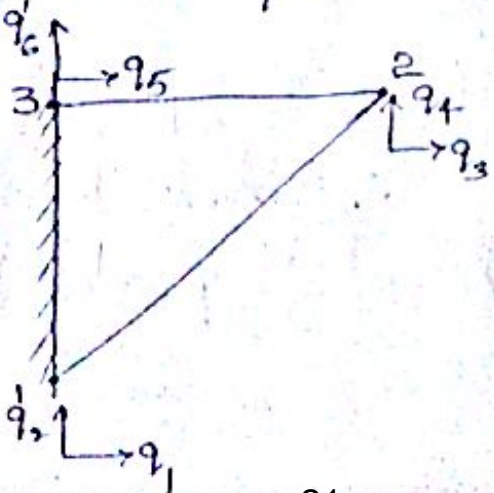

Scanned by CamScanner

$$D = \frac{E}{(1-\nu^2)}\begin{bmatrix} 1 & \nu & 0 \\ \nu & 1 & 0 \\ 0 & 0 & \frac{1-\nu}{2} \end{bmatrix} = \frac{70\times10^3}{1-0.3^2}\begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & 0.35 \end{bmatrix}$$

$$= \frac{7\times10^4}{0.91}\begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & 0.35 \end{bmatrix}$$

then

$$B = \frac{1}{\det J}\begin{bmatrix} y_{23} & 0 & y_{31} & 0 & y_{12} & 0 \\ 0 & x_{32} & 0 & x_{13} & 0 & x_{21} \\ x_{32} & y_{23} & x_{13} & y_{31} & x_{21} & y_{12} \end{bmatrix}$$

$$J = \begin{bmatrix} x_{13} & y_{13} \\ x_{23} & y_{23} \end{bmatrix} \Rightarrow \det J = -(30)(-20) = 600.$$

$$B = \frac{1}{600}\begin{bmatrix} 0 & 0 & 20 & 0 & -20 & 0 \\ 0 & -30 & 0 & 0 & 0 & 30 \\ -30 & 0 & 0 & 20 & 30 & -20 \end{bmatrix} = \frac{1}{60}\begin{bmatrix} 0 & 0 & 2 & 0 & -2 & 0 \\ 0 & -3 & 0 & 0 & 0 & 3 \\ -3 & 0 & 0 & 2 & 3 & -2 \end{bmatrix}$$

Let consider

$$B^T D = \frac{7\times10^4}{0.91\times60}\begin{bmatrix} 0 & 0 & -3 \\ 0 & -3 & 0 \\ 2 & 0 & 0 \\ 0 & 0 & 2 \\ -2 & 0 & 3 \\ 0 & 3 & -2 \end{bmatrix}\begin{bmatrix} 1 & 0.3 & 0 \\ 0.3 & 1 & 0 \\ 0 & 0 & 0.35 \end{bmatrix}$$

$$= 0.128\times10^4\begin{bmatrix} 0 & 0 & -1.05 \\ -0.9 & -3 & 0 \\ 2 & 0.6 & 0 \\ 0 & 0 & 0.7 \\ -2 & -0.6 & 1.05 \\ 0.9 & 3 & -0.7 \end{bmatrix}$$

∴ element stiffness Matrix

$$k_e = tAB^T DB$$

Scanned by CamScanner

$$K_e = 10\times\frac{1}{2}\times 20\times 30\times 0.128\times 10^{4}\times\frac{1}{60}\begin{bmatrix}0 & 0 & -1.05\\ 0.9 & -3 & 0\\ 2 & 0.6 & 0\\ 0 & 0 & 0.7\\ -2 & -0.6 & 1.05\\ 0.9 & 3 & -0.7\end{bmatrix}\begin{bmatrix}0 & 0 & 2 & 0 & -2 & 0\\ 0 & -3 & 0 & 0 & 0 & 3\\ -3 & 0 & 0 & 2 & 3 & -2\end{bmatrix}$$

$$= 6.4\times 10^{3}\begin{bmatrix}3.15 & 0 & 0 & -2.1 & -3.15 & 2.1\\ 0 & 9 & -1.8 & 0 & 1.8 & -9\\ 0 & -1.8 & 4 & 0 & -4 & 1.8\\ -2.1 & 0 & 0 & 1.4 & 2.1 & -1.4\\ -3.15 & 1.8 & -4 & 2.1 & 7.15 & -3.9\\ 2.1 & -9 & 1.8 & -1.4 & -3.9 & 10.4\end{bmatrix}$$

Global load vector $F = \begin{bmatrix}F_{1x}\\ F_{1y}\\ F_{2x}\\ F_{2y}\\ F_{3x}\\ F_{3y}\end{bmatrix}$

Now we know that

$$\theta = L A B^{T} D \epsilon_0$$

$$= \frac{5}{20}\times\frac{1}{2}\times 20\times 30\times\frac{1}{60}\times 0.128\times 10^{4}\begin{bmatrix}0 & 0 & -1.05\\ 0.9 & -3 & 0\\ 2 & 0.6 & 0\\ 0 & 0 & 0.7\\ -2 & -0.6 & 1.05\\ 0.9 & 3 & -0.7\end{bmatrix}\begin{Bmatrix}N\Delta T\\ N\Delta T\\ 0\end{Bmatrix}$$

$$= 384\times 10^{4}\begin{bmatrix}0 & 0 & -1.05\\ 0.9 & -3 & 0\\ 2 & 0.6 & 0\\ 0 & 0 & 0.7\\ -2 & -0.6 & 1.05\\ 0.9 & 3 & -0.7\end{bmatrix}_{6\times 3}\begin{bmatrix}-4\times 10^{-6}\times 10\\ 7\times 10^{-6}\times 10\\ 0\end{bmatrix}_{3\times 1}$$

$$= 384\times 10^{4}\begin{bmatrix}0\\ -0.000273\\ 0.000182\\ 0\\ -0.000182\\ \vdots\end{bmatrix}$$

Scanned by CamScanner

$$\theta = \begin{bmatrix} 0 \\ -1048.32 \\ 698.88 \\ 0 \\ -698.88 \\ +1048.32 \end{bmatrix} \begin{matrix} 1 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \end{matrix}$$

∴ Global load vector :

$$F = \begin{bmatrix} F_{1x} \\ F_{1y} \\ F_{2x} \\ F_{2y} \\ F_{3x} \\ F_{3y} \end{bmatrix} = \begin{bmatrix} R_{1x} \\ -1048.32 + R_{1y} \\ 500 + 698.88 \\ -1000 \\ -698.88 + R_{3x} \\ 1048.32 + R_{3y} \end{bmatrix}$$

Consider the finite element eq.

$$64\times10^3 \begin{bmatrix} 3.15 & 0 & 0 & -2.1 & -3.15 & 2.1 \\ 0 & 9 & -1.8 & 0 & 1.8 & -9 \\ 0 & -1.8 & 4 & 0 & -4 & 1.8 \\ -2.1 & 0 & 0 & 1.4 & 2.1 & -1.4 \\ -3.15 & 1.8 & -4 & 2.1 & 7.15 & -3.9 \\ 2.1 & -9 & 1.8 & -1.4 & -3.9 & 10.4 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \end{bmatrix} = \begin{bmatrix} R_{1x} \\ -1048.32+R \\ 1198.88 \\ -1000 \\ -698.88+R \\ 1048.32+R \end{bmatrix}$$

By using elimination approach, $q_1 = q_2 = q_5 = q_6 = 0$

Eliminate 1, 2, 5, 6 rows & columns

$$64\times10^3 \begin{bmatrix} 4 & 0 \\ 0 & 1.4 \end{bmatrix} \begin{bmatrix} q_3 \\ q_4 \end{bmatrix} = \begin{bmatrix} 1198.88 \\ -1000 \end{bmatrix}$$

$$64\times10^3 \times 4q_3 = 1198.88 \Rightarrow q_3 = 0.00468 \text{ mm.}$$

$$64\times10^3 \times 1.4q_4 = -1000 \Rightarrow q_4 = -0.01116 \text{ mm.}$$

Scanned by CamScanner

Element Stresses :

$$\sigma = D[\epsilon - \epsilon_0]$$

$$= DB q - D\epsilon_0$$

$$= \frac{7\times10^4}{0.91} \times \frac{1}{60}\begin{bmatrix}1 & 0.3 & 0\\ 0.3 & 1 & 0\\ 0 & 0 & 0.35\end{bmatrix}\begin{bmatrix}0 & 0 & 2 & 0 & -2 & 0\\ 0 & -3 & 0 & 0 & 0 & 3\\ -3 & 0 & 0 & 2 & 3 & -2\end{bmatrix} q - \frac{7\times10^4}{0.91}\times\begin{Bmatrix}N\Delta T\\ N\Delta T\\ 0\end{Bmatrix}$$

$$= 1282.051\begin{bmatrix}0 & -0.9 & 2 & 0 & -2 & 0.9\\ 0 & -3 & 0.6 & 0 & -0.6 & 3\\ -1.05 & 0 & 0 & 0.7 & +1.05 & 0.7\end{bmatrix} q - \frac{7\times10^4}{0.91}\times\begin{bmatrix}7\times10^{-5}\\ 7\times10^{-5}\\ 0\end{bmatrix}$$

$$= 1282.051\begin{bmatrix}0 & -0.9 & 2 & 0 & -2 & 0.9\\ 0 & -3 & 0.6 & 0 & -0.6 & 3\\ -1.05 & 0 & 0 & 0.7 & 1.05 & 0.7\end{bmatrix}\begin{bmatrix}0\\ 0\\ 0.00468\\ -0.01116\\ 0\\ 0\end{bmatrix} - \frac{7\times10^4}{0.91}\begin{bmatrix}7\times10^{-5}\\ 7\times10^{-5}\\ 0\end{bmatrix}$$

$$= 1282.051\begin{bmatrix}2(0.00468)\\ 0.6(0.00468)\\ 0.7(-0.01116)\end{bmatrix} - \frac{7\times10^4}{0.91}\begin{bmatrix}7\times10^{-5}\\ 7\times10^{-5}\\ 0\end{bmatrix}$$

$$= \begin{bmatrix}11.99\\ 3.599\\ -10.015\end{bmatrix} - \begin{bmatrix}5.384\\ 5.384\\ 0\end{bmatrix}$$

$$\sigma = \begin{bmatrix}6.606\\ -1.785\\ -10.015\end{bmatrix}$$

Scanned by CamScanner

Axisymmetric Loading :-


In general, all the structures and machine components are three dimensional members and their properties are analysed in FEM either by 1D, 2D and 3D techniques based on their dimensional ratios.


Eg:- 1D - Bars, Beams, Truss.
2D - Plates etc

At the same time, for some components known as Axisymmetric solids or Solids of Revolution, even though their all the 3 dimensions are comparatively large, they may be analysed using two dimensional techniques due to their axial symmetry.

Eg:- Pressure Vessels, Cylinders, Fly wheels.

Usually Z-axis may be considered as axis of symmetry and the point in the plane perpendicular to Z-axis is represented by Polar co-ordinates (r, θ). Because of symmetry all deformations and stresses are independent of co-ordinate θ.

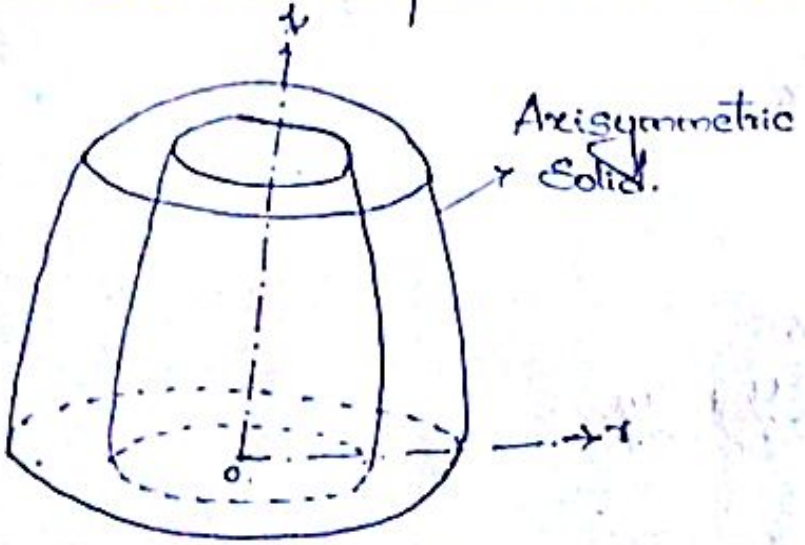

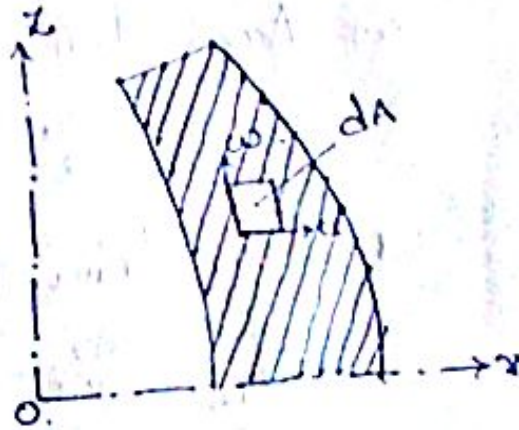


During analysis, body force may be considered wherever necessary. Similarly in the case of flywheel, centrifugal force may be taken into account.

Scanned by CamScanner

We know that 2D objects.

$u = [u, w]^T \quad f = [f_r, f_z]^T, \quad T = [T_r, T_z]^T$


* **Elasticity Relations :-**

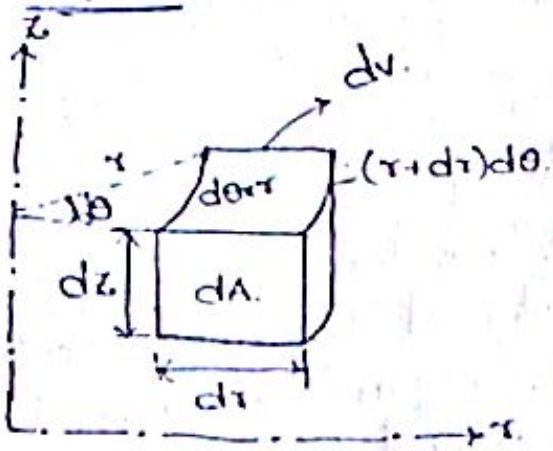

(a) Radial strain, ϵ_r

$$\epsilon_r = \frac{\partial u}{\partial r}$$

(b) Tangential strain ϵ_θ

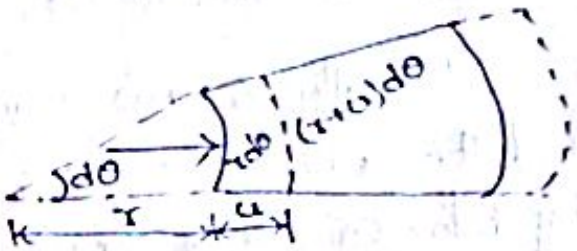

$$\epsilon_\theta = \frac{(r+u)d\theta - r d\theta}{r d\theta}$$

$$\epsilon_\theta = \frac{u d\theta}{r d\theta} = \frac{u}{r}$$

(c) Axial strain, ϵ_z

$$\epsilon_z = \frac{\partial w}{\partial z}$$

(d) Shear strain, γ_{rz}

$$\gamma_{rz} = \frac{\partial r}{\partial \theta} + \frac{\partial u}{\partial z} + \frac{\partial w}{\partial r}$$

∴ Strains for Axisymmetric solid, ϵ =

$$\epsilon = \begin{Bmatrix} \epsilon_r \\ \epsilon_z \\ \gamma_{rz} \\ \epsilon_\theta \end{Bmatrix} = \begin{Bmatrix} \frac{\partial u}{\partial r} \\ \frac{\partial w}{\partial z} \\ \frac{\partial u}{\partial z} + \frac{\partial w}{\partial r} \\ u/r \end{Bmatrix}$$

Scanned by CamScanner

and the stresses

$$\sigma = [\sigma_r, \sigma_z, \tau_{rz}, \sigma_\theta]^T$$

and Stress - Strain Relation

$$\sigma = D\varepsilon$$

We know that for 3D element

$$\begin{Bmatrix} \sigma_r \\ \sigma_z \\ \sigma_\theta \\ \tau_{rz} \\ \tau_{z\theta} \\ \tau_{r\theta} \end{Bmatrix} = \frac{E}{(1+\upsilon)(1-2\upsilon)} \begin{bmatrix} (1-\upsilon) & \upsilon & \upsilon & 0 & 0 & 0 \\ \upsilon & (1-\upsilon) & \upsilon & 0 & 0 & 0 \\ \upsilon & \upsilon & (1-\upsilon) & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{1}{2}-\upsilon & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{1}{2}-\upsilon & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{1}{2}-\upsilon \end{bmatrix} \begin{Bmatrix} \varepsilon_r \\ \varepsilon_z \\ \varepsilon_\theta \\ \gamma_{rz} \\ \gamma_{z\theta} \\ \gamma_{r\theta} \end{Bmatrix}$$

Here $\gamma_{z\theta}$ & $\gamma_{r\theta} = 0$.

Then, we get.

$$\begin{Bmatrix} \sigma_r \\ \sigma_z \\ \tau_{rz} \\ \sigma_\theta \end{Bmatrix} = \frac{E}{(1+\upsilon)(1-2\upsilon)} \begin{bmatrix} (1-\upsilon) & \upsilon & 0 & \upsilon \\ \upsilon & (1-\upsilon) & 0 & \upsilon \\ 0 & 0 & \frac{1}{2}-\upsilon & 0 \\ \upsilon & \upsilon & 0 & 1-\upsilon \end{bmatrix} \begin{Bmatrix} \varepsilon_r \\ \varepsilon_z \\ \gamma_{rz} \\ \varepsilon_\theta \end{Bmatrix}$$

$$\therefore D = \frac{E}{(1+\upsilon)(1-2\upsilon)} \begin{bmatrix} (1-\upsilon) & \upsilon & 0 & \upsilon \\ \upsilon & (1-\upsilon) & 0 & \upsilon \\ 0 & 0 & \frac{1}{2}-\upsilon & 0 \\ \upsilon & \upsilon & 0 & 1-\upsilon \end{bmatrix}$$


* **Strain Displacement Matrix :-**

Let $N_1 = \xi$

$N_2 = \eta$

$N_3 = 1 - \xi - \eta$

$N_1 + N_2 + N_3 = 1.$

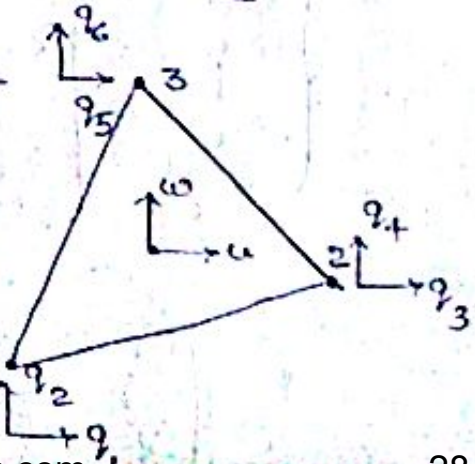

Scanned by CamScanner

$u = N_1 q_1 + N_2 q_3 + N_3 q_5$

$v = N_1 q_2 + N_2 q_4 + N_3 q_6$.

Substituting N_1, N_2 & N_3

$$u = \xi q_1 + \eta q_3 + (1 - \xi - \eta) q_5$$

$$= (q_1 - q_5)\xi + (q_3 - q_5)\eta + q_5.$$

$$u = q_{15}\xi + q_{35}\eta + q_5$$

& $v = q_{26}\xi + q_{46}\eta + q_6$.

Similarly

$$x = N_1 x_1 + N_2 x_2 + N_3 x_3.$$

$$z = N_1 z_1 + N_2 z_2 + N_3 z_3.$$

We get

$$x = (x_{13})\xi + x_{23}\eta + x_3.$$

$$z = z_{13}\xi + z_{23}\eta + z_3.$$

Using chain Rule.

$$\frac{\partial u}{\partial \xi} = \frac{\partial u}{\partial x}\frac{\partial x}{\partial \xi} + \frac{\partial u}{\partial z}\cdot\frac{\partial z}{\partial \xi}$$

$$\frac{\partial u}{\partial \eta} = \frac{\partial u}{\partial x}\frac{\partial x}{\partial \eta} + \frac{\partial u}{\partial z}\cdot\frac{\partial z}{\partial \eta}.$$

$$\begin{Bmatrix} \frac{\partial u}{\partial \xi} \\ \frac{\partial u}{\partial \eta} \end{Bmatrix} = \underbrace{\begin{bmatrix} \frac{\partial x}{\partial \xi} & \frac{\partial z}{\partial \xi} \\ \frac{\partial x}{\partial \eta} & \frac{\partial z}{\partial \eta} \end{bmatrix}}_{J} \begin{Bmatrix} \frac{\partial u}{\partial x} \\ \frac{\partial u}{\partial z} \end{Bmatrix}$$

$$J = \begin{bmatrix} \frac{\partial x}{\partial \xi} & \frac{\partial z}{\partial \xi} \\ \frac{\partial x}{\partial \eta} & \frac{\partial z}{\partial \eta} \end{bmatrix} = \text{Jacobian Matrix.}$$

Scanned by CamScanner

$$J = \begin{bmatrix} r_{13} & z_{13} \\ r_{23} & z_{23} \end{bmatrix}$$

$$\begin{Bmatrix} \frac{\partial u}{\partial r} \\ \frac{\partial u}{\partial z} \end{Bmatrix} = J^{-1} \begin{bmatrix} \frac{\partial u}{\partial \xi} \\ \frac{\partial u}{\partial \eta} \end{bmatrix}$$

$$J^{-1} = \frac{1}{\det J} \begin{bmatrix} z_{23} & -z_{13} \\ -r_{23} & +r_{13} \end{bmatrix}$$

$$\begin{Bmatrix} \frac{\partial u}{\partial r} \\ \frac{\partial u}{\partial z} \end{Bmatrix} = \frac{1}{\det J} \begin{bmatrix} z_{23} & -z_{13} \\ -r_{23} & +r_{13} \end{bmatrix} \begin{Bmatrix} \frac{\partial u}{\partial \xi} \\ \frac{\partial u}{\partial \eta} \end{Bmatrix} = \frac{1}{\det J} \begin{bmatrix} z_{23} & -z_{13} \\ -r_{23} & +r_{13} \end{bmatrix} \begin{Bmatrix} q_{15} \\ q_{35} \end{Bmatrix}$$

Similarly.

$$\begin{Bmatrix} \frac{\partial w}{\partial r} \\ \frac{\partial w}{\partial z} \end{Bmatrix} = \frac{1}{\det J} \begin{bmatrix} z_{23} & -z_{13} \\ -r_{23} & +r_{13} \end{bmatrix} \begin{Bmatrix} \frac{\partial v}{\partial \xi} \\ \frac{\partial v}{\partial \eta} \end{Bmatrix} = \frac{1}{\det J} \begin{bmatrix} z_{23} & -z_{13} \\ -r_{23} & +r_{13} \end{bmatrix} \begin{Bmatrix} q_{26} \\ q_{46} \end{Bmatrix}$$

Now consider the Strain.

$$\epsilon = \begin{Bmatrix} \frac{\partial u}{\partial r} \\ \frac{\partial w}{\partial z} \\ \frac{\partial u}{\partial z} + \frac{\partial w}{\partial r} \\ u/r \end{Bmatrix} = \begin{bmatrix} \frac{1}{\det J}\left[z_{23} q_{15} - z_{13} q_{35}\right] \\ \frac{1}{\det J}\left[-r_{23} q_{26} + r_{13} q_{46}\right] \\ \frac{1}{\det J}\left[-r_{23} q_{15} + r_{13} q_{35} + z_{23} q_{26} - z_{13} q_{46}\right] \\ \frac{N_1 q_1 + N_2 q_3 + N_3 q_5}{r} \end{bmatrix}$$

$$\epsilon = \begin{bmatrix} \frac{1}{\det J}\left[z_{23} q_{15} + z_{31} q_{35}\right] \\ \frac{1}{\det J}\left[r_{32} q_{26} + r_{13} q_{46}\right] \\ \frac{1}{\det J}\left[r_{32} q_{15} + r_{13} q_{35} + z_{23} q_{26} + z_{31} q_{46}\right] \\ \frac{N_1}{r} q_1 + \frac{N_2}{r} q_3 + \frac{N_3}{r} q_5 \end{bmatrix}$$

www.Jntufastupdates.com

Scanned by CamScanner

$$\epsilon = \begin{bmatrix} \frac{1}{\det J}\left[z_{23}q_1 - z_{23}q_5 + z_{31}q_3 - z_{31}q_5\right] \\ \frac{1}{\det J}\left[r_{32}q_2 - r_{32}q_6 + r_{13}q_4 - r_{13}q_6\right] \\ \frac{1}{\det J}\left[r_{32}q_1 - r_{32}q_5 + r_{13}q_3 - r_{13}q_5 + z_{23}q_2 - z_{23}q_6 + z_{31}q_4 - z_{31}q_6\right] \\ \frac{N_1}{r}q_1 + \frac{N_2}{r}q_3 + \frac{N_3}{r}q_5 \end{bmatrix}$$

$$\epsilon = \begin{bmatrix} \frac{1}{\det J}\left[z_{23}q_1 + z_{31}q_3 + q_5\left[-z_{23} - z_{31}\right]\right] \\ \frac{1}{\det J}\left[r_{32}q_2 + r_{13}q_4 + q_6\left[-r_{32} - r_{13}\right]\right] \\ \frac{1}{\det J}\left[r_{32}q_1 + z_{23}q_2 + r_{13}q_3 + z_{31}q_4 + \left[-r_{32} - r_{13}\right]q_5 + \left[-z_{23} - z_{31}\right]q_6\right] \\ \frac{N_1}{r}q_1 + \frac{N_2}{r}q_3 + \frac{N_3}{r}q_5 \end{bmatrix}$$

$$\epsilon = \begin{bmatrix} \frac{z_{23}}{\det J} & 0 & \frac{z_{31}}{\det J} & 0 & \frac{z_{12}}{\det J} & 0 \\ 0 & \frac{r_{32}}{\det J} & 0 & \frac{z_{13}}{\det J} & 0 & \frac{z_{21}}{\det J} \\ \frac{r_{32}}{\det J} & \frac{z_{23}}{\det J} & \frac{z_{13}}{\det J} & \frac{z_{31}}{\det J} & \frac{r_{21}}{\det J} & \frac{z_{12}}{\det J} \\ \frac{N_1}{r} & 0 & \frac{N_2}{r} & 0 & \frac{N_3}{r} & 0 \end{bmatrix} \begin{bmatrix} q_1 \\ q_2 \\ q_3 \\ q_4 \\ q_5 \\ q_6 \end{bmatrix}$$

$\because \left[-z_{23} - z_{31}\right] = \left[z_{32} + z_{13}\right]$

$= z_3 - z_2 + z_1 - z_3$

$= z_{12}.$

$\left[-r_{32} - r_{13}\right] = \left[r_{23} + r_{31}\right]$

$= r_2 - r_3 + r_3 - r_1$

$= r_{21}$

Scanned by CamScanner

$$B = \begin{bmatrix} \frac{z_{23}}{\det J} & 0 & \frac{z_{31}}{\det J} & 0 & \frac{z_{12}}{\det J} & 0 \\ 0 & \frac{r_{32}}{\det J} & 0 & \frac{r_{13}}{\det J} & 0 & \frac{r_{21}}{\det J} \\ \frac{r_{32}}{\det J} & \frac{z_{23}}{\det J} & \frac{r_{13}}{\det J} & \frac{z_{31}}{\det J} & \frac{r_{21}}{\det J} & \frac{z_{12}}{\det J} \\ \frac{N_1}{r} & 0 & \frac{N_2}{r} & 0 & \frac{N_3}{r} & 0 \end{bmatrix}$$

Here $N_1 = N_2 = N_3 = 1/3$.

$r = \frac{r_1 + r_2 + r_3}{3}$ and $k_e = 2\pi r A_e B^T D B$


Problems :-

Compute the strain-displacement Matrix for the axisymmetric Triangular element shown in fig. Also determine the element strains. The nodal displacements are found out as

$u_1 = 0.002$ $w_1 = 0.001$

$u_2 = 0.001$ $w_2 = -0.004$

$u_3 = -0.003$ $w_3 = 0.007$

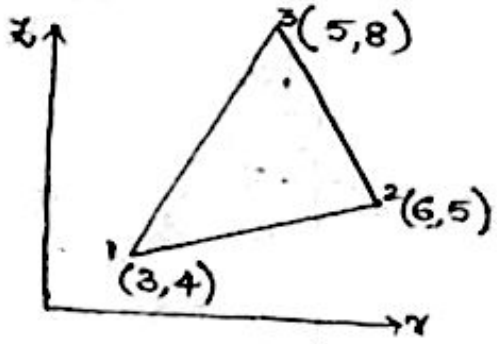

Sol:- Here

$(r_1, z_1) = (3,4)$; $(r_2, z_2) = (6,5)$;

$(r_3, z_3) = (5,8)$

and Area of $\Delta le = \frac{1}{2}\begin{vmatrix} 1 & r_1 & z_1 \\ 1 & r_2 & z_2 \\ 1 & r_3 & z_3 \end{vmatrix} = \frac{1}{2}\begin{vmatrix} 1 & 3 & 4 \\ 1 & 6 & 5 \\ 1 & 5 & 8 \end{vmatrix}$

$= \frac{1}{2}\left[1(48-25) - 3(8-5) + 4(5-6)\right]$

$A = 5 cm^2$

and $r = \frac{r_1 + r_2 + r_3}{3} = \frac{3+6+5}{3} = \frac{14}{3} = 4.7$

& $N_1 = N_2 = N_3 = 1/3$.

Scanned by CamScanner

We have

$$B = \frac{1}{detJ}\begin{bmatrix} z_{23} & 0 & z_{31} & 0 & z_{12} & 0 \\ 0 & r_{32} & 0 & r_{13} & 0 & r_{21} \\ r_{32} & z_{23} & r_{13} & z_{31} & r_{21} & z_{12} \\ \frac{N_1(detJ)}{r} & 0 & \frac{N_2(detJ)}{r} & 0 & \frac{N_3(detJ)}{r} & 0 \end{bmatrix}$$

$$J = \begin{bmatrix} r_{13} & z_{13} \\ r_{23} & z_{23} \end{bmatrix} = \begin{bmatrix} -3 & -4 \\ 1 & -3 \end{bmatrix}$$

$detJ = 6+4 = 10.$

Simply we can write Area $A = \frac{1}{2}[detJ]$

$$B = \frac{1}{10}\begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 3 & -1 \\ \frac{1/3(10)}{4\pi} & 0 & \frac{(1/3)(10)}{4.7} & 0 & \frac{1/3(10)}{4.7} & 0 \end{bmatrix}$$

$$B = \frac{1}{10}\begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 3 & -1 \\ 0.709 & 0 & 0.709 & 0 & 0.709 & 0 \end{bmatrix}$$

Now, the element strains

$$\begin{Bmatrix} \epsilon_r \\ \epsilon_z \\ \gamma_{rz} \\ \epsilon_\theta \end{Bmatrix} = \frac{1}{10}\begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 3 & -1 \\ 0.709 & 0 & 0.709 & 0 & 0.709 & 0 \end{bmatrix}\begin{bmatrix} u_1 \\ w_1 \\ u_2 \\ w_2 \\ u_3 \\ w_3 \end{bmatrix}$$


Scanned by CamScanner


$$\begin{bmatrix} \epsilon_r \\ \epsilon_z \\ \gamma_{rz} \\ \epsilon_\theta \end{bmatrix} = \frac{1}{10}\begin{bmatrix} -3 & 0 & 4 & 0 & -1 & 0 \\ 0 & -1 & 0 & -2 & 0 & 3 \\ -1 & -3 & -2 & 4 & 2 & -1 \\ 0.709 & 0 & 0.709 & 0 & 0.709 & 0 \end{bmatrix}\begin{bmatrix} 0.002 \\ 0.001 \\ 0.001 \\ -0.001 \\ -0.002 \\ 0.007 \end{bmatrix}$$

By Solving the above Matrix, we get

$$\begin{bmatrix} \epsilon_r \\ \epsilon_z \\ \gamma_{rz} \\ \epsilon_\theta \end{bmatrix} = \begin{bmatrix} 1\times10^{-4} \\ -28\times10^{-4} \\ 39\times10^{-4} \\ -8\times10^{-6} \end{bmatrix}$$

2. In fig. a cylinder of inside diameter 80mm and outside dia 120 snugly fits in a hole over its full length. The cylinder is then subjected to an internal pressure of 2 MPas. Using 2 elements on the 10mm length shown, find the disp. at the inner radius.

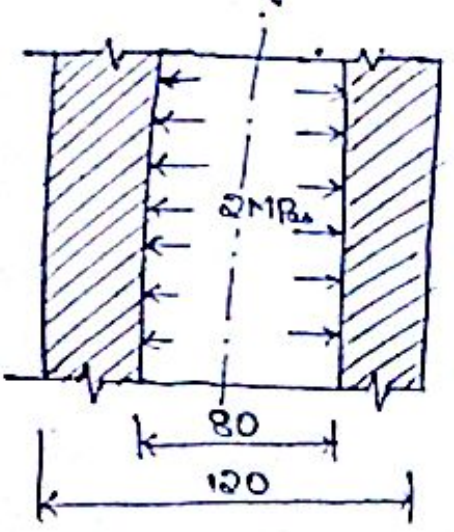

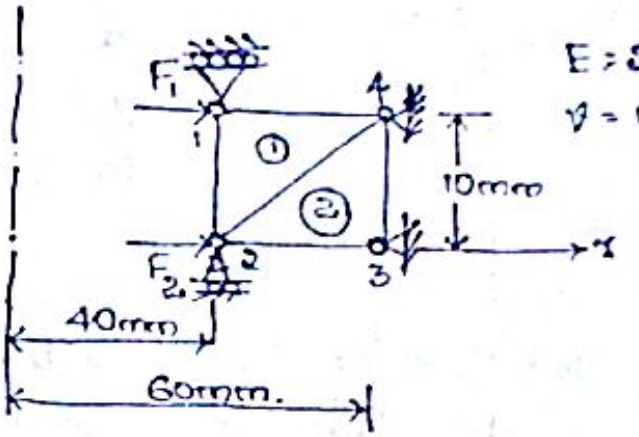

E = 200 Gpas.
ϑ = 0.3.

Sol:

Elements	Nodes		
①	1	2	4
②	2	3	4

Nodes	Co-ordinates	
1	40	10
2	40	0
3	60	0
4	60	10.

$E = 200 GPa = 200\times10^3 MPas$

$\vartheta = 0.3$

Scanned by CamScanner

Element ①

$r_1 = 40$, $r_2 = 40$, $r_3 = 60$.

$$r_b = \frac{r_1 + r_2 + r_3}{3} = \frac{140}{3} = 46.66.$$

Element ②

$r_1 = 40$, $r_2 = 60$ $r_3 = 60$

$$r_b = \frac{r_1 + r_2 + r_3}{3} = \frac{160}{3} = 53.34.$$

Now consider

$$D = \frac{E}{(1+v)(1-2v)} \begin{bmatrix} (1-v) & v & 0 & v \\ v & 1-v & 0 & v \\ 0 & 0 & \frac{1}{2}-v & 0 \\ v & v & 0 & 1-v \end{bmatrix}$$

$$= \frac{200 \times 10^3}{(1+0.3)(1-2(0.3))} \begin{bmatrix} (1-0.3) & 0.3 & 0 & 0.3 \\ 0.3 & 1-0.3 & 0 & 0.3 \\ 0 & 0 & \frac{1}{2}-0.3 & 0 \\ 0.3 & 0.3 & 0 & 1-0.3 \end{bmatrix}$$

$$= 10^5 \begin{bmatrix} 2.68 & 1.15 & 0 & 1.15 \\ 1.15 & 2.68 & 0 & 1.15 \\ 0 & 0 & 0.76 & 0 \\ 1.15 & 1.15 & 0 & 2.68 \end{bmatrix}$$

We Now consider the element ①

$$J = \begin{bmatrix} r_{13} & z_{13} \\ r_{23} & z_{23} \end{bmatrix}$$

$$J = \begin{bmatrix} -20 & 0 \\ -20 & -10 \end{bmatrix} \Rightarrow |J| = ad - bc = 200 mm^2$$

Area of element ①

$$A_1 = \frac{1}{2} \times b \times h = \frac{1}{2} \times 10 \times 20 = 100 mm^2$$

Scanned by CamScanner

$$B = \begin{bmatrix} \frac{y_{23}}{|J|} & 0 & \frac{x_{31}}{|J|} & 0 & \frac{x_{12}}{|J|} & 0 \\ 0 & \frac{x_{32}}{|J|} & 0 & \frac{x_{13}}{|J|} & 0 & \frac{x_{21}}{|J|} \\ \frac{x_{32}}{|J|} & \frac{y_{23}}{|J|} & \frac{x_{13}}{|J|} & \frac{y_{31}}{|J|} & \frac{x_{21}}{|J|} & \frac{y_{12}}{|J|} \\ \frac{N_1}{r} & 0 & \frac{N_2}{r} & 0 & \frac{N_3}{r} & 0 \end{bmatrix}$$

$$= \begin{bmatrix} -10/200 & 0 & 0 & 0 & 10/200 & 0 \\ 0 & 20/200 & 0 & -20/200 & 0 & 0 \\ 20/200 & -10/200 & -20/200 & 0 & 0 & 10/200 \\ 0.0071 & 0 & 0.0071 & 0 & 0.0071 & 0 \end{bmatrix}$$

Since $r_1 = 46.66$ & $N_1 = N_2 = N_3 = 1/3$.

$$B = \begin{bmatrix} -0.05 & 0 & 0 & 0 & 0.05 & 0 \\ 0 & 0.1 & 0 & -0.1 & 0 & 0 \\ 0.1 & -0.05 & -0.1 & 0 & 0 & 0.05 \\ 0.0071 & 0 & 0.0071 & 0 & 0.0071 & 0 \end{bmatrix}$$

Similarly for element ③

$$J = \begin{bmatrix} x_{13} & z_{13} \\ x_{23} & z_{23} \end{bmatrix} = \begin{bmatrix} -20 & -10 \\ 0 & -10 \end{bmatrix} = 200 mm^2$$

$$A_2 = 1/2 \times 10 \times 20 = 100 mm^2$$

$$B = \begin{bmatrix} -10/200 & 0 & 10/200 & 0 & 0 & 0 \\ 0 & 0 & 0 & -20/200 & 0 & 20/200 \\ 0 & -10/200 & -20/200 & 10/200 & 20/200 & 0 \\ 0.0062 & 0 & 0.0062 & 0 & 0.0062 & 0 \end{bmatrix}$$

$$B = \begin{bmatrix} -0.05 & 0 & 0.05 & 0 & 0 & 0 \\ 0 & 0 & 0 & -0.1 & 0 & 0.1 \\ 0 & -0.05 & -0.1 & 0.05 & 0.1 & 0 \\ 0.0062 & 0 & 0.0062 & 0 & 0.0062 & 0 \end{bmatrix}$$

Scanned by CamScanner

Now consider element ①.

$$DB' = 10^5 \begin{bmatrix} 2.68 & 1.15 & 0 & 1.15 \\ 1.15 & 2.68 & 0 & 1.15 \\ 0 & 0 & 0.76 & 0 \\ 1.15 & 1.15 & 0 & 2.68 \end{bmatrix} \begin{bmatrix} -0.05 & 0 & 0 & 0 & 0.05 & 0 \\ 0 & 0.1 & 0 & -0.1 & 0 & 0 \\ 0.1 & -0.05 & 0.1 & 0 & 0 & 0.05 \\ 0.0071 & 0 & 0.0071 & 0 & 0.0071 & 0 \end{bmatrix}$$

$$= 10^5 \begin{bmatrix} -0.125 & 0.115 & 0.0082 & -0.115 & 0.143 & 0 \\ -0.049 & 0.268 & 0.0082 & -0.268 & +0.0657 & 0.01 \\ 0.077 & -0.0385 & -0.077 & 0 & 0 & -0.0385 \\ -0.0384 & 0.115 & 0.0191 & -0.115 & 0.076 & 0 \end{bmatrix}$$

Element stiffness Matrix $K_1 = \pi r^2 A B^T DB$.

$$K_1 = \pi(46.66) \times 100 \times \begin{bmatrix} -0.05 & 0 & 0.1 & 0.0071 \\ 0 & 0.1 & -0.05 & 0 \\ 0 & 0 & 0.1 & 0.0071 \\ 0 & -0.1 & 0 & 0 \\ 0.05 & 0 & 0 & 0.0071 \\ 0 & 0 & 0.05 & 0 \end{bmatrix} \times$$

$$10^5 \begin{bmatrix} -0.125 & 0.115 & 0.0082 & -0.115 & 0.143 & 0 \\ -0.049 & 0.268 & 0.0082 & -0.268 & +0.0657 & 0.01 \\ 0.077 & -0.0385 & -0.077 & 0 & 0 & -0.0385 \\ -0.0384 & 0.115 & 0.0191 & -0.115 & 0.076 & 0 \end{bmatrix}$$

$$K_1 = 10^7 \begin{bmatrix} 4.03 & -2.58 & -2.34 & 1.45 & -1.932 & 1.13 \\ -2.58 & 8.45 & 1.37 & -7.89 & 1.93 & -0.565 \\ -2.34 & 1.37 & 2.30 & -0.24 & 0.16 & -1.13 \\ 1.45 & -7.89 & -0.24 & 7.89 & -1.93 & 0 \\ -1.932 & 1.93 & 0.16 & -1.93 & 2.25 & 0 \\ 1.13 & -0.565 & -1.13 & 0 & 0 & 0.565 \end{bmatrix}$$

(1 2 3 4 7 8)

Scanned by CamScanner

Element (2)

$$DB^2 = 10^3 \begin{bmatrix} 2.62 & 1.15 & 0 & 1.15 \\ 1.15 & 2.62 & 0 & 1.15 \\ 0 & 0 & 0.76 & 0 \\ 1.15 & 1.15 & 0 & 2.62 \end{bmatrix} \begin{bmatrix} -0.05 & 0 & 0.05 & 0 & 0 & 0 \\ 0 & 0 & 0 & -0.1 & 0 & 0.1 \\ 0 & -0.05 & 0.1 & 0.05 & 0.1 & 0 \\ 0.0062 & 0 & 0.0062 & 0 & 0.0062 & 0 \end{bmatrix}$$

$$DB^2 = 10^4 \begin{bmatrix} -1.27 & 0 & 1.42 & -1.15 & 0.072 & 1.15 \\ -0.503 & 0 & 0.647 & -2.69 & 0.072 & 2.67 \\ 0 & -0.385 & -0.77 & 0.385 & 0.77 & 0 \\ -0.407 & 0 & 0.743 & -1.15 & 0.162 & 1.15 \end{bmatrix}$$

$$K_2 = \pi t A B^T D B$$

$$= \pi(53.34) \times 100 \times \begin{bmatrix} -0.05 & 0 & 0 & 0.0062 \\ 0 & 0 & -0.05 & 0 \\ 0.05 & 0 & -0.1 & 0.0062 \\ 0 & -0.1 & 0.05 & 0 \\ 0 & 0 & 0.1 & 0.0062 \\ 0 & 0.1 & 0 & 0 \end{bmatrix} \times 10^4 \cdot \begin{bmatrix} -1.27 & 0 & 1.42 & -1.15 & 0.072 & 1.15 \\ -0.503 & 0 & 0.647 & -2.69 & 0.072 & 2.69 \\ 0 & -0.385 & -0.77 & 0.385 & 0.77 & 0 \\ -0.407 & 0 & 0.743 & -1.15 & 0.162 & 1.15 \end{bmatrix}$$

$$K_2 = 10^7 \begin{bmatrix} 2.05 & 0 & -2.22 & 1.69 & -0.085 & -1.69 \\ 0 & 0.645 & 1.29 & -0.645 & -1.29 & 0 \\ -2.22 & 1.29 & 5.11 & -3.46 & -2.42 & 2.17 \\ 1.69 & -0.645 & -3.46 & 9.66 & 1.05 & -9.01 \\ -0.085 & -1.29 & -2.42 & 1.05 & 2.62 & 0.241 \\ -1.69 & 0 & 2.17 & -9.01 & 0.241 & 9.01 \end{bmatrix}$$

Scanned by CamScanner

Finally we get 8×8 Matrix, Since, the Nodes 3, 4 are completely fixed

$q_5 = q_6 = q_7 = q_8 = 0$, and also, at Node one and 2 there is a Roller support in x-dirt.

$q_2 = 0$ & $q_4 = 0$.

$$10^7 \begin{bmatrix} 4.03 & -2.34 \\ -2.34 & 4.35 \end{bmatrix} \begin{Bmatrix} q_1 \\ q_3 \end{Bmatrix} = \begin{Bmatrix} F_1 \\ F_2 \end{Bmatrix}$$

We have

(Pressure) $P = F/A \left(\text{Force}/\text{Area} \right)$

$$F = P \times A = 2\pi r l \times P$$

This force F is distributed to two Nodes

$$F_1 = F_2 = \frac{2\pi r L \times P}{2} = \frac{2\pi (40)(10) 2}{2} = 2514 N.$$

$$10^7 \begin{bmatrix} 4.03 & -2.34 \\ -2.34 & 4.35 \end{bmatrix} \begin{Bmatrix} q_1 \\ q_3 \end{Bmatrix} = \begin{bmatrix} 2514 \\ 2514 \end{bmatrix}$$

By solving, we get

$q_1 = 0.014 \times 10^{-2}$ mm

$q_3 = 0.0133 \times 10^{-2}$ mm.

—— × —— × ——.

Scanned by CamScanner